



Programming Modes

1. By default, **CHARLIE** has 5 tactical/brightness modes (high, med, low, candle and SOS) plus strobe, which is always available and not programmable. You can select which of these modes that you want to use.
2. To enter program mode, start with the flashlight off and quickly click the button 5 times. The LED indicator will then flash red/green to indicate you are in program mode. The flashlight will then cycle through the 5 programmable modes. As each mode comes on, simply single click to keep/program that mode or double click to omit/deprogram that mode.
3. you select a mode, the LED indicator turns solid green for 2 secs, and if you cancel a mode, the LED turns red for 2 secs.
4. After running through the selection process for all 5 modes, the indicator flashes red/green to confirm programming is complete. If no action is taken for 30 secs, the flashlight will be turned off and the programming will be canceled.
5. To reset to factory default mode, start from off and quickly click the switch 10 times.

Operation

1. Unscrew head to insert an 18650 battery with positive (+) end of battery pointing toward the head/lens. Then securely rescrew flashlight head.
2. Click the switch to turn flashlight on/off.
3. When the flashlight is on, press and hold the switch to cycle through the default or programmed modes. As soon as the desired mode is reached, release the button. The selected mode will then be set in memory, and the flashlight will return to the memorized mode next time it is turned on.
4. To activate direct access strobe mode, double click the switch at any time (direct access strobe is available when flashlight is on or off). Double click switch again to change back from strobe mode to previous mode.
5. The switch can be locked to prevent unintended operation. To enter LOCK mode, press & hold the switch for 3 seconds when the flashlight is off (LED will flash red to confirm LOCK). To unlock, again press and hold the switch for 3 seconds (LED will flash green to confirm UNLOCKED).

LED Power Level Indicator

Solid Green: 20 - 100% power level.

Solid Red: 10- 20% power remaining.

Blinking Red: Less than 10% power remaining - Time to Recharge!

Charging

1. Connect USB-C cable to power port and power source to start charging.
2. Charging time: 3-4 hrs. The flashlight can operate while charging.
3. LED indicator will be solid red when charging and green when full.