

Features

- Built with a genuine high power 3500 lm CREE® XHP-70 LED emitter.
- Runs on one **MF TACTICAL** 21700mAh **ECO CELL** rechargeable battery.
- Waterproof intelligent charging port with voltage detection circuit charges battery via magnetic induction (without having to remove the battery) using the included USB-C high quality charging cable with innovative swivel head.
- Thermal protection circuit prevents overheating at extremely high output.
- Intuitive analog mode dial allows user to select one of 7 tactical modes for each of 4 colors (white, red, green & blue) for a total of 28 available modes.
- Dual Switch Design: Recessed "thumb friendly" tail switch for on/off/momentary on plus side switch for light color selection (white, red, green & blue).
- Color LED battery real time power indicator integrated into side tac switch.
- Efficient power provides exceptionally long runtime on white of up to 4.5 hrs. on high mode and 45 hours on extra low mode.
- Tail tactical momentary-on switch for temporarily turn-on.
- Toughened ultra-clear mineral glass lens with anti-reflective coating.
- Constructed from aerospace-grade aluminum alloy with HAIII military grade hard anodized finish for exceptional durability.

Dimensions

Length: 6.375"

Head diameter: 1.7"

Tube diameter: 1"

Weight: 6.8 oz. (without battery)

Optional Accessories

Available at **MONSTERFLASHLIGHT.COM**: 5v USB-C AC Adapter, 12v DC Car Adapter, Single or Dual External Chargers, ballistic nylon case/belt holster, **MF TACTICAL** 21700 rechargeable **ECO CELL** li-ion batteries, weapon & bike mounts.

Output & Runtime (white light)

	HIGH	MED	LOW	Ext Low	STROBE	A	B
	3500 LUMENS	2450 LUMENS	1400 LUMENS	350 LUMENS	3500 LUMENS	3500 LUMENS	3500 LUMENS
	4.5 hrs	7 hrs	12 hrs	45 hrs	5 hrs	150 hrs	350 hrs
	Up to 150m Beam Distance on HIGH						
	IPX-48, 1 meter for 60 mins (Waterproof & Submersible)						

Operation

- Click the tail switch button once to turn the light on. Click again to turn off.
- Momentary-On: Lightly press tail switch to activate. Release button to turn off.
- Mode Selection: When flashlight is on, dial the ring to select through modes (High, Med, Low, Extra Low, Special Mode A and Special Mode B).
- Light source selection, when the light is turn on, long-press the side switch to cycle from the light source: white, red, green & blue.

Mode Selection

PRO TANGO RGB has 7 modes (5 standard modes plus 2 special modes (A & B)) for each of its 4 color selections for a total of 28 modes. The dial position of the mode selector dial selects the mode and the side tac button selects the light color selection. For each of the four light color selections, the 5 standard modes and 2 special modes (A & B) are as follows:


Dial Position Light Color	High	Medium	Low	Ex.Low	Strobe	A	B
White	3500lm	2450lm	1400lm	350lm	White Strobe	Bike Mode	Beacon Mode
Red	250lm	175lm	100lm	24lm	Red Strobe	Red - Blue Strobe	Red - White Strobe
Green	250lm	175lm	100lm	24lm	Green Strobe	Green - Red Strobe	Green - White Strobe
Blue	250lm	175lm	100lm	24lm	Blue Strobe	Blue - Green Strobe	Blue - White Strobe

PRO TANGO RGB User Guide

Setup instructions

Battery installation:

Unscrew tail cap from body tube, insert one 21700 Li-ion **ECO CELL** battery with the positive (+) end pointing toward the flashlight head, then rescrew tail cap.

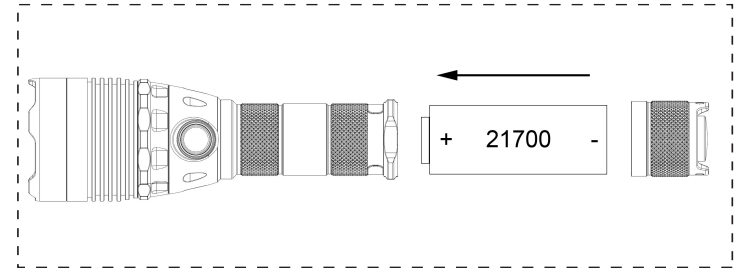


Notes

- For safety and reliability, it is recommended that you only use high quality **MF TACTICAL** brand **ECO CELL** 21700 batteries in your **PRO TANGO RGB**. Other types of batteries may not be able to properly power your state of the art high power flashlight.
- Insert battery with the positive (+) end towards the flashlight head.
- DO NOT use CR123A or any type of unprotected batteries.
- DO NOT disassemble the flashlight unless you are a professional.
- Any damage caused by improper disassembly will not be covered by the warranty.

Charging - Just "Stick & Click"

- Connect the magnetic end of the charging cable to the charging port on the flashlight ("STICK") and plug the USB-C end of the cable into a powered USB-C port or the optional high power USB-C AC adapter. **IMPORTANT:** After connecting the cable ("STICK"), you must click ("CLICK") the tail power button to start charging (LED indicator will turn red). Click tail button again when charge is done. Remember, charging will only occur when you "STICK & CLICK."
- When the magnetic induction to USB-C cable is fully connected, the color LED indicator in the side tac switch will show the charging status.
- Color indicator will be solid red while charging. Fully charging a battery will take approximately 3-4 hrs. When charging is complete, the indicator will turn solid green.
- Indicator will flash red/green (error signal) if you have connected the cable but have forgotten to click the power button. When you (A) connect the cable ("STICK") and (B) press the power button ("CLICK"), indicator will turn solid red to indicate charging has started.

TO CHARGE:
"Stick"
Magnet

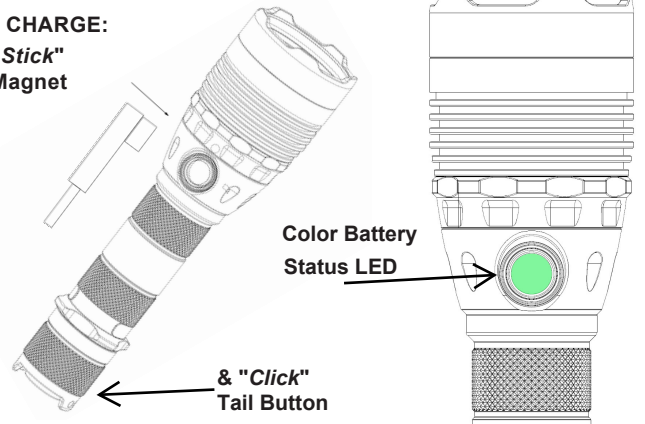

LED Power Level Indicator

Whenever the flashlight is turned on, the color LED indicator in the switch will display the current power level of the battery as follows:

Solid Green: 20 - 100% power level.

Solid Red: 10- 20% power remaining.

Blinking Red: Less than 10% power remaining - Time to Recharge!